

## Operating Instruction

### LED screen display:

**Timer setting button:** Select desired time setting – 1/2/3/4/5/6 hours.

**Auto-Off:** The heat pad will automatically turn off after the selected time.

**Heat setting button:** Select desired heat level, to select heat level between L,2,3,4,5,6,7,8,9,H (Low to High) and stop at desired heat setting.

**Heat Setting:** L is lowest heat, H is highest heat.

**USE as Heat Pad ONLY:** Always to be placed over an individual

– Not under them or under bed sheets – not to be used as an under blanket.

**Pre-Heat:** This heat pad is programmed with a pre-heat procedure for quick heat distribution when you turn it on.

**Soft Flexible Wires:** The heating wires are soft and flexible and manufactured in an advanced process for greater comfort, soft touch, flexibility and even heat distribution.

### Care Instruction:

**Before cleaning the electric heat pad, ensure it is unplugged from mains and allow it cool down completely.**

**Ensure controller/plug is removed from electric heat pad.**

To remove the controller, gently pull the controller plug directly out. **Do not pull** the controller cable.

Once the electric heat pad is cleaned and **completely dry**, to fit the controller plug, simply hold the socket with one hand and push the controller plug all the way into the socket.

**DO NOT DRY CLEAN, DO NOT WRING, DO NOT SPIN DRY, DO NOT TUMBLE DRY.**

**Ensure all controllers and plugs are unplugged from the power point and from the electric heat pad before cleaning. Ensure the controllers and plugs do not get wet.**


**Ensure the electric heat pad completely cools down before washing.**

**Note: The heat pad must be thoroughly dried including controller sockets.**

• With normal use it is recommended you wash your heat pad once a year.

Examine the heat pad frequently for signs of wear or damage. If any signs of wear or damage or if the appliance has been misused, stop using the heat pad immediately.

## Controller: CB-23E

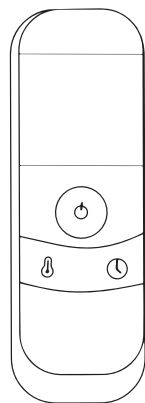

## Frequently Asked Question

### Q. What to do if my Heat Pad will not turn on?

**A.** Check and ensure the power cord is plugged in correctly, ensure the socket is switched on and check the controller cable is correctly connected to the Heat Pad and then switch on.

### Q. Can I use my Heat Pad in my car?

**A.** NO – it is only to be used indoors – with a 220-240V AC 50Hz power supply.

### Q. What should I do if I find any wear or damage to my Heat Pad?

**A.** Stop use immediately.

### Q. My controller feels warm to the touch – is this a problem?

**A.** No. The controller will feel warm to the touch when functioning correctly.

### Q. What does 'F0' 'F1' 'F2' 'F3' 'F4' mean on my controller?

**A.** The controller is programmed to notify you in the event that a problem occurs. The codes below indicate what the problem is.

F0 – Input voltage error – ensure you have plugged the Heat Pad into a correct socket.

F1 – Electrical frequency is incorrect – ensure it is plugged into the 50Hz power supply.

F2 – Loose connection between the power cord and the Heat Pad – connect correctly.

F3 – Control Box internal error.

F4 – Control box electronic component error.

## RESET INSTRUCTIONS

1. Turn off the controller first, then unplug from the wall socket and disconnect the power cord from the Heat Pad.
2. Allow to cool fully.
3. Reconnect the power cord to the Heat Pad, ensure it is fully connected.
4. Plug in the power cord to an indoor 220-240V AC 50Hz socket and ensure the socket is switched on.
5. Set the controller to 'ON'.
6. Repeat this process to try and clear the error.
7. If error F3 or F4 persist, unplug and contact your retailer.

**Please retain these instructions for future reference.**

### Technical Specification:

**Heat Pad Model No.: YZH-3060P**

**Controller Model No.: CB-23E**

**Heat pad material: 100% Polyester**

**Rated Input: 120W**

Beamfeature EU (P. Ruia)

Gartenstraße 22, 82067, Schäftlarn, Deutschland.


beamfeature.eu@beamfeature.co.uk

Manufacturer: BFL - M32 OTP - UK.



Made in P.R.C

# Electric Weighted Heat Pad

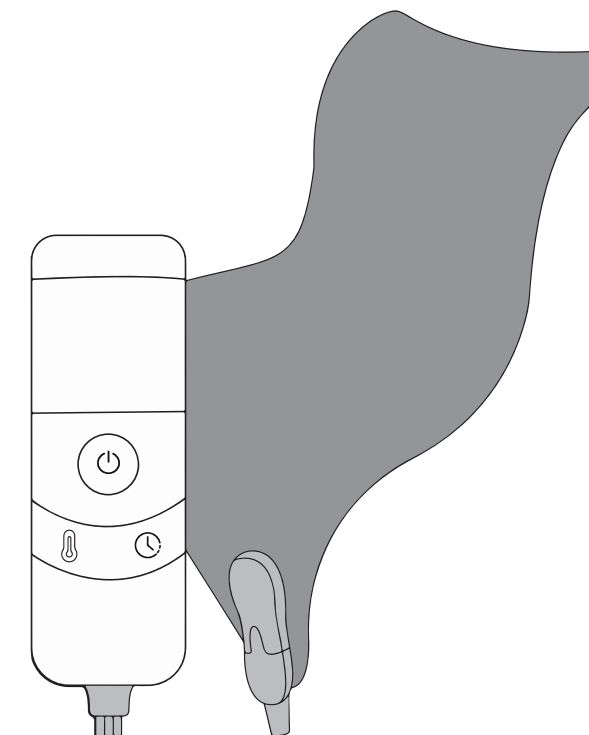

10 HEAT SETTINGS



AMBIENT HEAT



120 WATTS



1/2/3/4/5/6 HOUR AUTO SHUT OFF



RAPID HEATING

# IMPORTANT SAFETY INSTRUCTIONS – RETAIN FOR FUTURE USE

## Please read all instructions carefully before use.

Examine the heat pad frequently for signs of wear or damage. If there are such signs or if the heat pad has been misused at first use, return it to the company you have purchased it from prior to any further use.

When using this heat pad, to reduce the risk of fire, electric shock and/or injury to persons, basic safety precautions **MUST** always be followed.

## Safety instructions:

1. When the electric heat pad is **folded, crumpled or used abnormally**, the electric heat pad can overheat which will activate the permanent protection function.
2. **This heat pad is to only be used to cover the body.**
3. **Do not sit or lie on the heat pad.**

## Warnings and cautions

To prevent damage or malfunction, users must follow below points while using the product.



1. Do not use folded or rucked.
2. Do not roll the heat pad while being used. Ensure electric heat pad is laid flat over the body.
3. Do not insert or use pins on the heat pad. Do not attempt to secure the electric heat pad with pins or other metal objects. Do not scratch with sharp devices or beat the electric heat pad with blunt devices.



4. Do not use whilst asleep.
5. To avoid burn/scalding of the body, do not use with a helpless person, a person sensitive to heat or other very vulnerable persons who are unable to react to overheating. Do not use if pregnant.
6. Do not turn on the electric heat pad when there is any folded bedding or heavy objects on it, as it will cause the heat pad to overheat.
7. Do not expose the electric heat pad to direct sunlight. Do not iron the electric heat pad. Avoid any damage to the insulation of the heating wires.



8. Do not use together with any other heating appliances (such as foot warmer, hot-water bottle).

9. Switch off the electric heat pad power or pull out the electric heat pad plug from power socket when you are going out. Do not leave electric heat pad unattended.
10. Do not dry clean.



11. **Not to be used by children. Adult use only.**

12. Heat pad conforms to the WEEE standard - it should be recycled at the end of its life and NOT disposed of in household waste.



13. Before using, check the electric heat pad for damage. Do not use the electric heat pad if any damage is found on the product. If the mains supply cord is damaged a replacement with the controller **MUST** be obtained from the manufacturer. Do not attempt to perform any repairs on the electric heat pad yourself.
14. Do not unplug the power plug by pulling on the power cord and do not move the heat pad by pulling on the soft power cord.

15. Only use together with the supplied controller **CB-23E**.

16. To protect against electric shock, do not immerse any part of the heat pad in water or other liquid whilst switched on. **Do not use if wet.**

17. When not in use, the electric heat pad should be stored in a dry place. When storing the heat pad, allow it to cool down before folding. Do not crease the heat pad by placing items on top of it during storage. After storing, the heat pad should be carefully checked before use to make sure the controller and cords are safe.

18. Do not cover heat pad during use. e.g. with a blanket, cushion or duvet.

19. For prolonged continuous use, please only select heat setting L.

20. It is recommended to unplug the heat pad from the mains socket when not in use.

21. **DO NOT** tuck in, pinch, flex or expose the wired heating area or bunch whilst in use, excess heating may result.

22. **DO NOT** allow the cords to be pinched, trapped or crushed as it can cause damage to the power cord.

23. If you spill any liquids on the product, stop use immediately, unplug and dry thoroughly before further use.

24. In door use only.



25. Never open the controller case. Any repair to the cords or controller must be carried out by the manufacturer or suitably qualified person.

26. Keep animals away from the electric heat pad – they may damage the wiring.

27. Do not turn on the electric heat pad until it is fully assembled.

28. Only plug into 220 – 240V AC, 50Hz wall outlet.

29. Do not use analgesic cream when using the heat pad - **CAN CAUSE BURNS**.

## Please follow the instruction and warnings for safe use of the product.



Hand wash or delicate machine wash at 30 degrees or less.

**DO NOT DRY CLEAN, DO NOT WRING, DO NOT SPIN DRY, DO NOT TUMBLE DRY.**

Ensure the controller is unplugged from the power point and from the electric heat pad before cleaning. Ensure the electric heat pad completely cools down before washing.

**DO NOT** wash the plug or controller.

## Line Dry Only

## DO NOT USE IF WET OR DAMP



**Read Instructions**



**Do not use folded or rucked**



**Do not insert pins**

Do not use with a helpless person, children or a person insensitive to heat. Prolonged application at high setting can result in skin burns.

**Do not use directly against the skin - Always wear a base layer. e.g. T-shirt.**

Only use together with the supplied controller – **CB-23E**